

# tSENSE (Disp)


## CO<sub>2</sub>-, Temperature- and RH-Transmitter with colour touch display









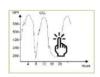





transmitter designed for installation in the air-conditioned zone. It measures CO<sub>2</sub> concentration, temperature and humidity in the ambient air accurately without need for additional compensation — true read. The data transmits to a BMS system or stand-alone controller using industry standard output signals and communication protocols.

**ESENSE** combines all the necessary elements for effective climate control in commercial office buildings, hospitals, hotels, schools and other facilities. Using CO<sub>2</sub>-monitoring for demand control ventilation (DCV) allows healthy, comfortable and cost-effective environment for the occupants. It is flexible in design with temperature control and combination of humidity control optional. Though suitable for use in many different energy-efficient ventilation strategies, **Senseair**<sup>®</sup> welcomes any discussions for specific needs.

Complies with ASHRAE standard 189.1 (±50ppm @ 1000ppm of measured CO<sub>2</sub> value)

## STANDARD SPECIFICATION

Measured gas
Operating principle
Measurement range
OUT1 CO2

OUT2 Temperature
OUT3 Relative Humidity

Accuracy (CO<sub>2</sub>)

Dimensions

Dimensions display
Life expectancy

Operation temperature range

Power supply

Power supply Communication

Carbon dioxide (CO<sub>2</sub>)

Non-dispersive infrared (NDIR)

0-2000ppm

0-10VDC, 0-2000ppm 0-10VDC, 0-50°C

0-10VDC, 0-100%RH

±30ppm ±3% of reading

125mm x 85mm x 22mm

49mm x 37mm >15 years

0-50°C

12VDC, 24VAC/DC

Modbus (MB) or BACnet (BAC)

protocol over RS485

#### **KEY BENEFITS**

- Maintenance free
- 3 sensors in one housing
- Colour touch display with possibility of customisable GUI
- Flexibility Temperature and/or Humidity optional
- Improved housing design for effective measurement

Document Rev Page PSH0109 15 1 (2)



### tSENSE™ (Disp) Technical Specification

Conoral	Performance:
General	renonnance.

Storage Temperature Range .....-30-70°C 

Buttons......Touch display (Disp)

Warm-up Time .....≤1min.(@ full specs 15min )

Operating Temperature Range ......0-50°C

Operating Humidity Range ......0—95%RH, non condensing humidity environment

Operating Environment ......Residential, commercial

Electrical / Mechanical:

Peak Power Consumption.....<2W

Wiring Connections .......Screw terminal, max 1.5mm<sup>2</sup>, Containing: Power, GND, Out1, Out2,

Out3, RS485. Option: passive temperature or relay

CO<sub>2</sub> Measurement:

Response Time (T<sub>1/e</sub>) .....<3min Measurement Range ......0-2000ppm<sub>vol</sub>

Accuracy <sup>3</sup>.....±50ppm (@1000ppm<sub>vol</sub>, 17–28°C and 30–60%RH)

Typical full range: ±30ppm +3% of measured value <sup>4, 5</sup>

Pressure Dependence...+1.58% reading per kPa deviation from normal pressure, 101.3kPa

Measurement Interval......15s

Temperature Measurement:

Measurement Range (T) ......0-50°C

Accuracy <sup>6</sup>.....±0.5°C (@ 17–28°C), ±1.0°C (@ 0–50°C)

Repeatability ......±0.25°C (@ 17-28°C) Response Time.....<6min (Air velocity of 0.15m/s)

Measurement Interval......15s

Relative Humidity Measurement:

Measurement Range.....0-100%RH

Accuracy 6.....±5%RH (@ 20-80%RH) Hysteresis ......±1%RH (@ 20-80%RH)

Annual Drift .....<=±0.5%RH

Repeatability ......±0.25%RH (@ 17-28°C) Response Time.....<6min (Air velocity of 0.15m/s)

Measurement Interval......15s

Outputs:

Linear Analog Outputs:

Protection......PTC-fuses (auto reset), short-circuit safe

Output Conversion Accuracy.....±2% of reading ±20mV

Output Signal .......Voltage output 0-10V,  $R_{out} < 100\Omega$ , Load:  $>5k\Omega$ 

Relay (RL) <sup>7</sup>.....On ≥1000ppm<sub>vol</sub> CO<sub>2</sub>, Off ≤900ppm<sub>vol</sub>, CO<sub>2</sub>, at screw terminal Form C / DPDT, I<sub>max</sub>: 1A/50VAC/24VDC

Document Rev Page PSH 109 2(2)

2

SO<sub>2</sub> enriched environments are excluded.
 No maintenance required in normal indoor air as ABC (Automatic Baseline Calibration) is used.

No maintenance required in normal indoor air as ABC (Automatic Baseline Calibration) is used.

In normal IAQ applications, accuracy is defined after minimum three (3) ABC-periods of continuous operation with ABC.

Accuracy is specified over operating temperature range. Specification is referenced to certified calibration mixtures. Uncertainty of calibration gas mixtures (±1% currently) is to be added to the specified accuracy for absolute measurements.

Repeatability is included. Uncertainty of calibration gases (±1%) is added to the specified accuracy.

<sup>&</sup>lt;sup>6</sup> Depending on display brightness setting.

<sup>7</sup> Can be configured with PC software UIP (version 5 or later). See information at <u>senseair.com</u>